


# MONTÁŽNY

Assembly instructions

OS12

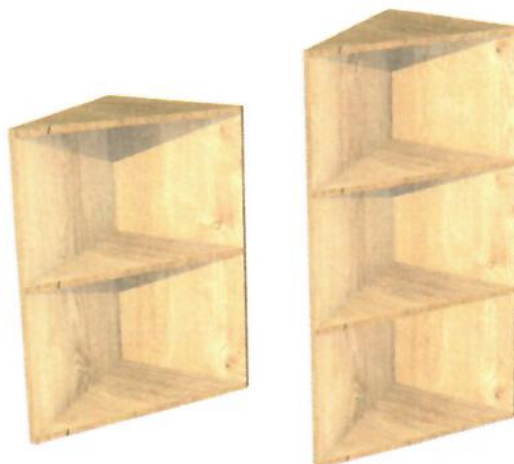

návod

- Pozorne si prečítajte montážny návod
- Vybalte z krabíc jednotlivé elementy a prekontrolujte ich obsah
- Zmontujte vybalené elementy podľa návodu
- Montážny návod dobre uschovajte



- **Nepoužívajte na čistenie chemikálie a abrazívne prostriedky!**

- Read the assembly instructions carefully
- Unfold the individual elements from boxes and check their contents
- Assemble unfolded elements according to the instructions
- Keep the assembly instructions well







- **Do not use chemicals and abrasive cleaners!**

1.




2.

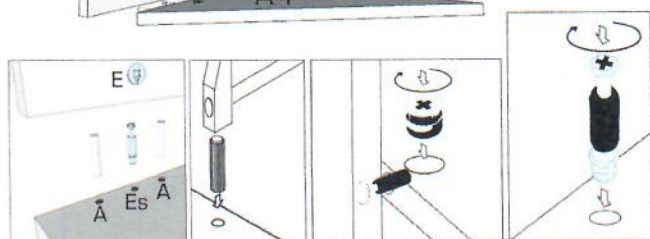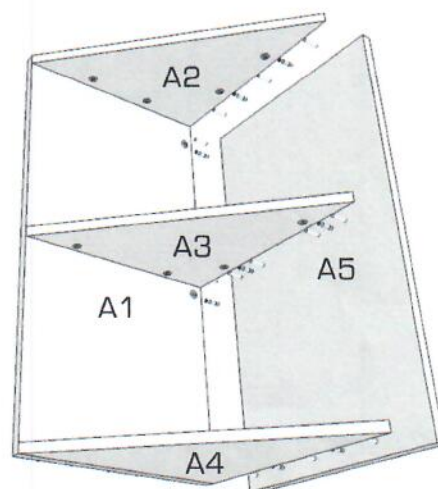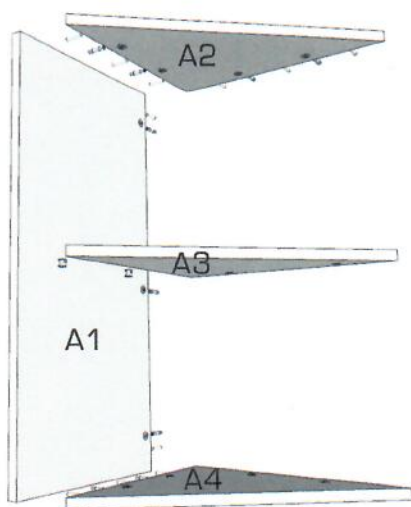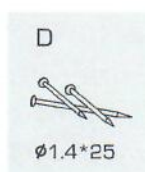

# 3.

Na dno skrinky A3 priskrutkujte klzáky.

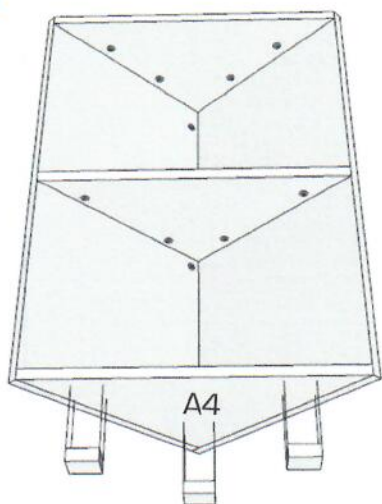

K1



Ø4\*16

N

