

# MONTÁŽNY

Assembly instructions

OS14



návod

- Pozorne si prečítajte montážny návod
- Vybalte z krabíc jednotlivé elementy a prekontrolujte ich obsah
- Zmontujte vybalené elementy podľa návodu
- Montážny návod dobre uschovajte

- **Nepoužívajte na čistenie chemikálie a abrazívne prostriedky!**



- Read the assembly instructions carefully
- Unfold the individual elements from boxes and check their contents
- Assemble unfolded elements according to the instructions
- Keep the assembly instructions well





- **Do not use chemicals and abrasive cleaners!**





1.




2.

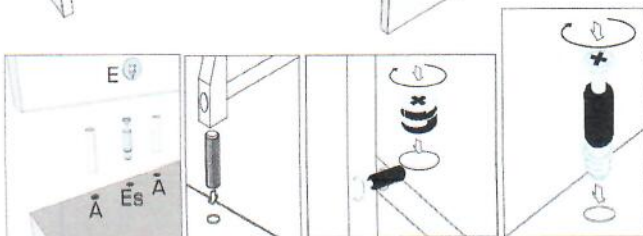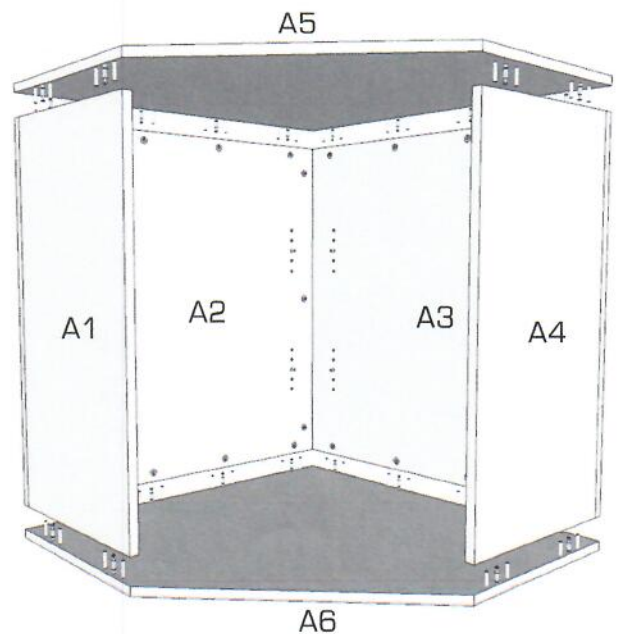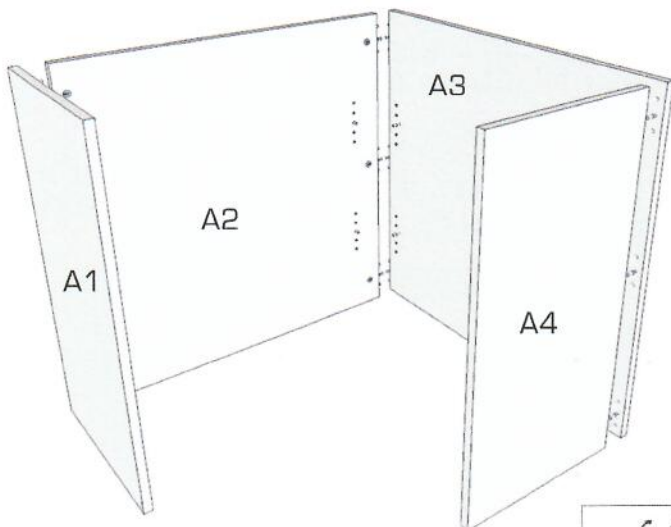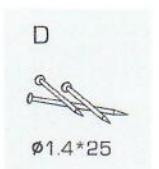


**3.** Na dno skrinky A5 priskrutkujte klzáky.

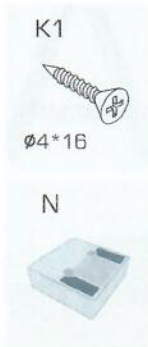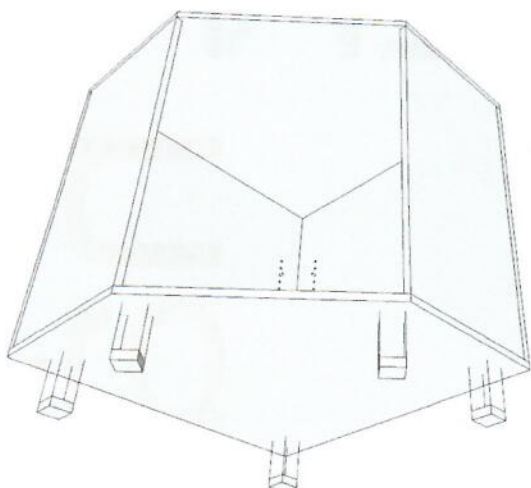

**4.** Na diely A1/A2 priskrutkujte podložku závesu C1 a na dverka záves C4. (platí pre verziu s dverkami)

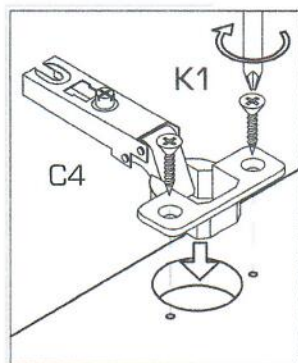

**5.** Dvierka namontujte a nastavte podľa obrázku.

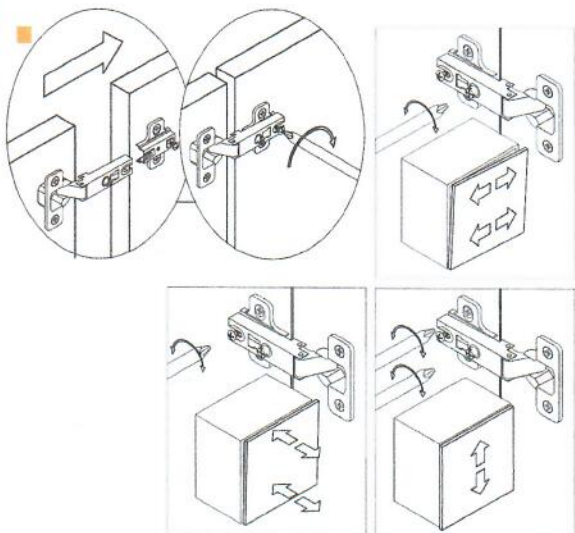

**6.** Vložte podperky na ktoré umiestnite police.

B

