

MONTÁŽNY

Assembly instructions

OS15



návod

- Pozorne si prečítajte montážny návod
- Vybalte z krabíc jednotlivé elementy a prekontrolujte ich obsah
- Zmontujte vybalené elementy podľa návodu
- Montážny návod dobre uschovajte



- **Nepoužívajte na čistenie chemikálie a abrazívne prostriedky!**
- Read the assembly instructions carefully
- Unfold the individual elements from boxes and check their contents
- Assemble unfolded elements according to the instructions
- Keep the assembly instructions well







Do not use chemicals and abrasive cleaners!



1.




2.

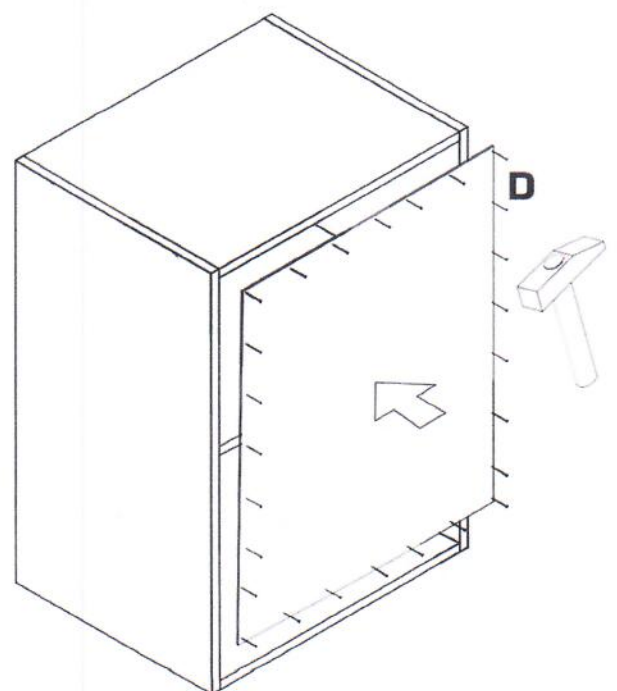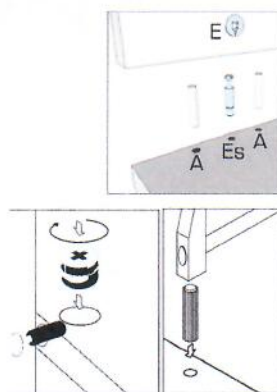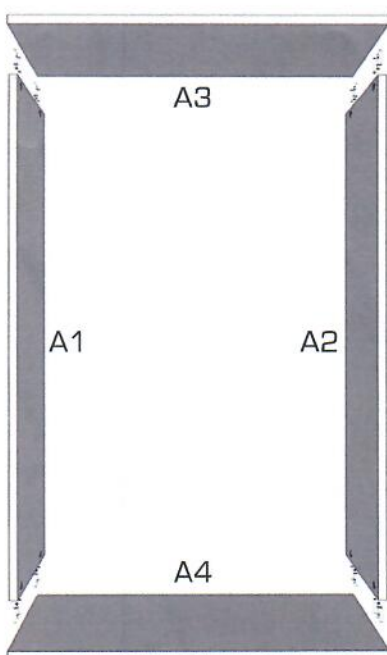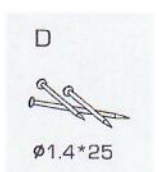


3. Na dno skrinky A5 priskrutkujte klzáky.

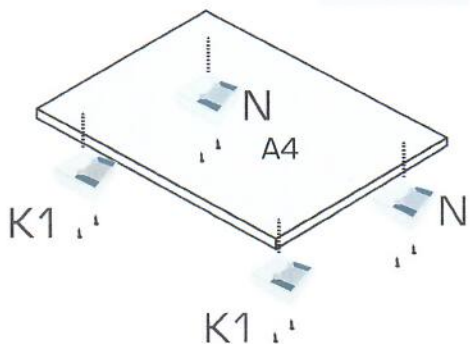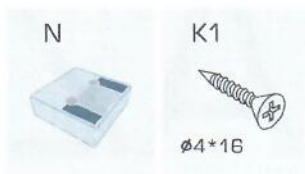

4. Na diely A1/A2 priskrutkujte podložku závesu C1 a na dvierka záves C4. (platí pre verziu s dvierkami)

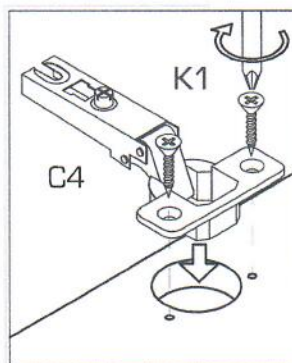

5. Dvierka namontujte a nastavte podľa obrázku.

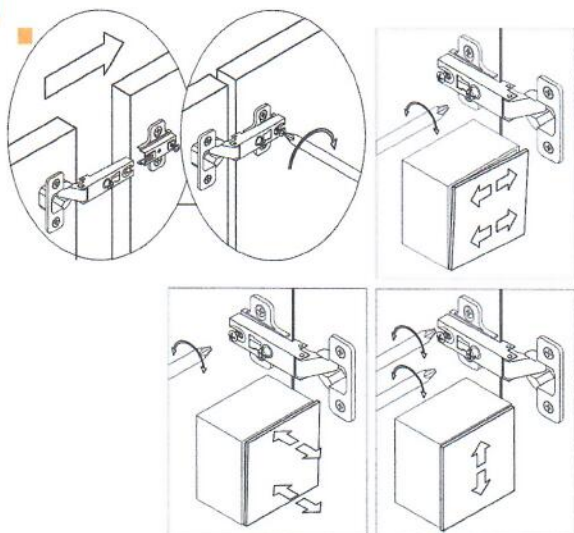

6. Vložte podperky na ktoré umiestnite police.

