


MONTÁŽNY

Assembly instructions

SN-16

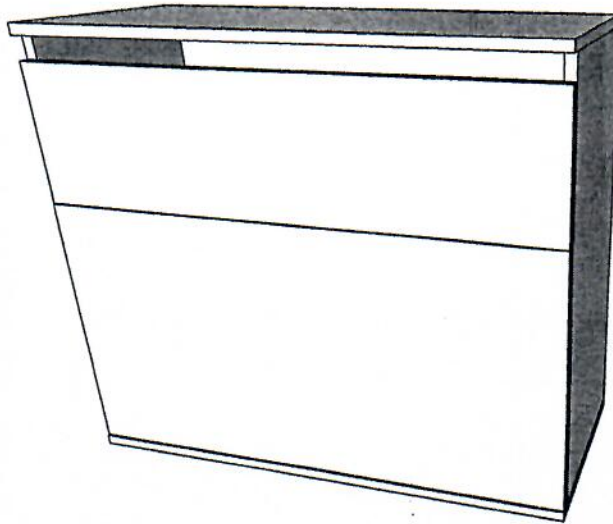

návod


- Pozorne si prečítajte montážny návod
- Vybalte z krabíc jednotlivé elementy a prekontrolujte ich obsah
- Zmontujte vybalené elementy podľa návodu
- Montážny návod dobre uschovajte
- Nepoužívajte na čistenie chemikálie a abrazívne prostriedky!






- Read the assembly instructions carefully
- Unfold the individual elements from boxes and check their contents
- Assemble unfolded elements according to the instructions
- Keep the assembly instructions well
- Do not use chemicals and abrasive cleaners!




1.

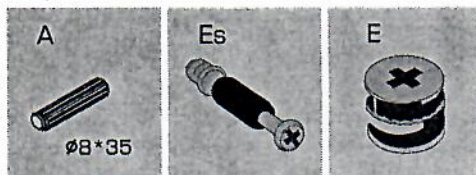



2.

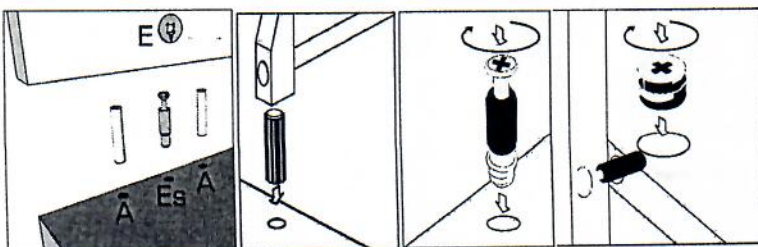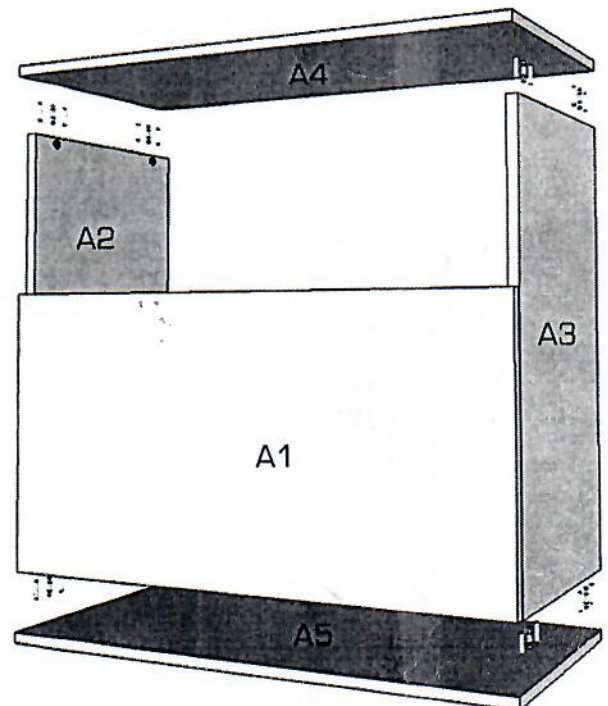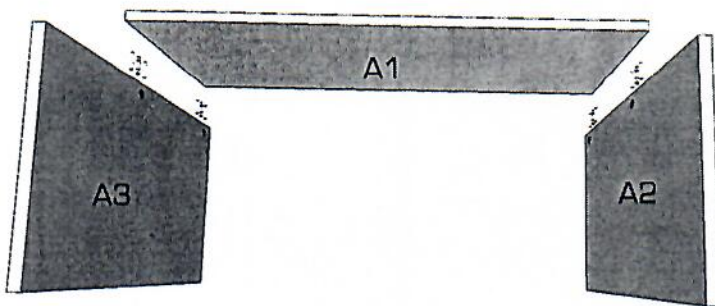



3. Na skrinku pripevnite zadnú stranu A6 pomocou klinčov.

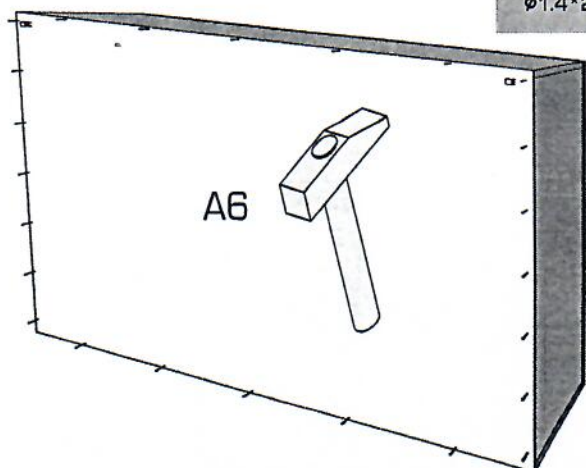


4.

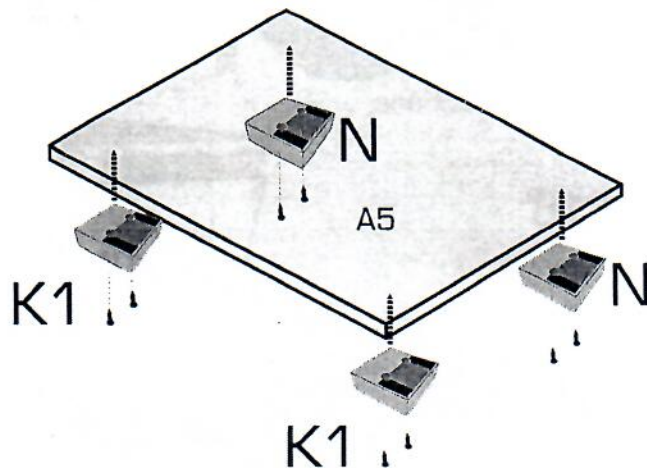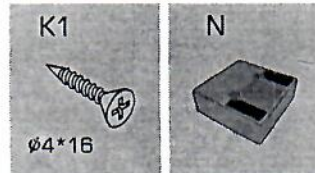

5. Na dvierka DV namontujte záves C2. Namontujte dvierka na skrinku.

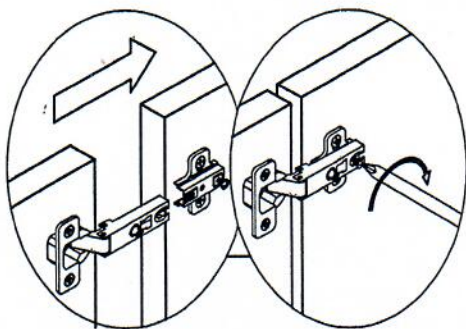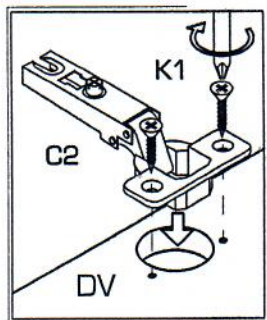

6. Nastavte dvierka podľa obrázku.

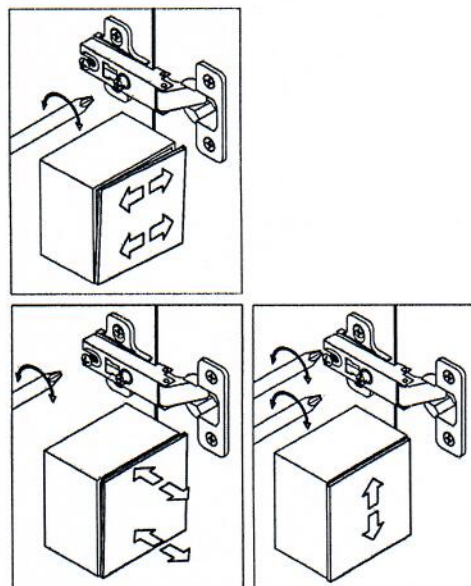

7.

